



31 Mangrove Lane Taren Point NSW 2229
PO Box 2066 Taren Point NSW 2229
Phone: 1300 792 464
Fax: 1300 309 041
Email: sales@hesnsw.com.au
Web: www.hesnsw.com.au

OPERATOR'S MANUAL

HAND CHAIN HOIST 0.25 TONNE



Oz
Mechanical


www.ozblok.com.au

TABLE OF CONTENTS

- WARRANTY POLICY 3
- SAFETY INFORMATION 3
- PRE-INSTALLATION INSTRUCTIONS 4
- SAFETY PRECAUTIONS 4
- INSPECTION AND MAINTENANCE 5
- HOOKS 7
- CHAIN 8
- SPARE PARTS LIST 9
- SPARE PARTS DRAWING 10
- SERVICE NOTES 11

SERVICE NOTES

SPARE PARTS 0.25 Tonne

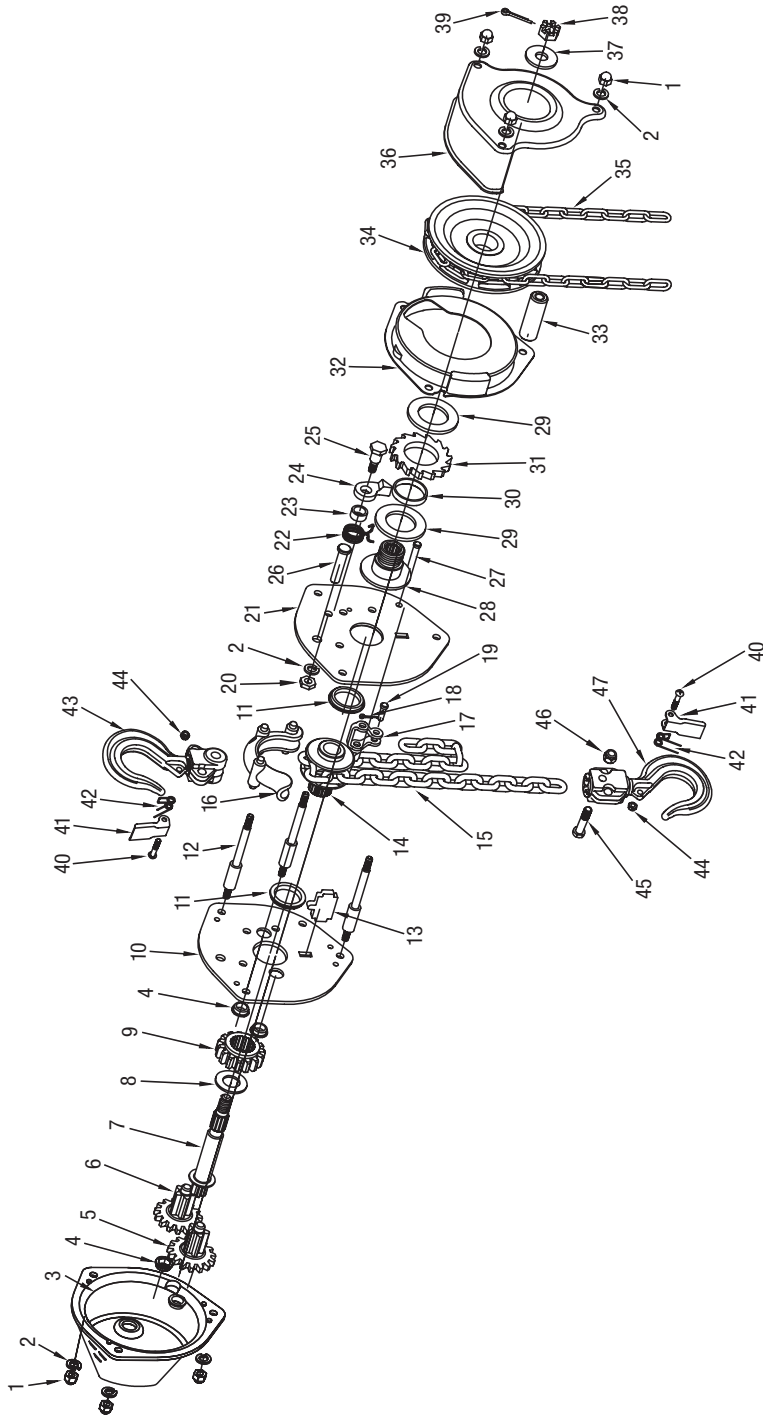

ONE YEAR LIMITED WARRANTY

OzBlok products are guaranteed to be free of defects in materials and workmanship. If one of these products fails during the first year of operation due to defective materials or workmanship it will be repaired or replaced at our discretion. Normal wear and tear of moving parts is excluded from this guarantee. This guarantee does not apply to any product showing signs of misuse, overloading, alteration or improper maintenance.

WARRANTY POLICY

Any product for which there is a warranty claim must be returned prepaid to an authorized **OzBlok** warranty depot along with proof of purchase.

For information on **OzBlok** products, please contact your local distributor:



31 Mangrove Lane Taren Point NSW 2229
PO Box 2066 Taren Point NSW 2229
Phone: 1300 792 464
Fax: 1300 309 041
Email: sales@hesnsw.com.au
Web: www.hesnsw.com.au

SAFETY INFORMATION

It is the responsibility of the owner/user to install, inspect, test, maintain, and operate these products in accordance with AS1418.2 standards.

These general instructions deal with the normal installation, operation and maintenance situations encountered with the products described herein.

This product should not be installed, operated or maintained by any person who has not read all the contents of these instructions. Failure to read and comply with these instructions or any of the warnings or limitations noted herein can result in serious bodily injury or death, and/or property damage.

Only trained and qualified personnel shall operate and maintain this equipment.

Equipment described herein is not designed for, and should not be used for lifting, supporting or transporting people.

Modifications to up-grade, re-rate or otherwise alter these products can only be authorized by the manufacturer.

PRE-INSTALLATION INSTRUCTIONS

Check for damage during shipment. DO NOT install or use a damaged product. Check and verify any structure or other equipment that will support the product has a rated load capacity equal to or greater than the rated load capacity of the product to be used.

OPERATION

Before initial operation:

1. Read and comply with all instructions and warnings furnished with or attached to the product if applicable.
2. Check lubricant.
3. Check operation of brake.
4. Where applicable, check that chain is properly seated in sheaves and that chain is not twisted, kinked or damaged.

Before each shift, where applicable:

1. Inspect hooks for nicks, gouges, cracks, and signs of pulling apart or twisting.
2. Inspect hook latch for proper operation.
3. Check chain for kinks or twists.
4. Check operation of brake.
5. Replace warning label if missing or illegible.

Before operating:

1. Be certain all personnel are clear of the load to be lifted and moved.
2. Make sure load will clear stock piles, machinery, or other obstructions when hoisting and travelling the load.

SAFETY PRECAUTIONS

- READ** these instructions before installing, operating, or maintaining this equipment.
- WARN** personnel of approaching loads.

SPARE PARTS LIST

Fig. No.	Description
1	Nut M5
2	Spring washer
3	Bent plate
4	Bushing
5	Disk gear A
6	Disk gear B
7	Driving shaft
8	Washer
9	Spline gear
10	Right side plate
11	Bearing race
12	Stay
13	Stripper
14	Chain sprocket
15	Load chain
16	Guiding cover
17	Suspension ring
18	Pin 1 x 8
19	Suspension pin
20	Hex nut M5
21	Left side plate
22	Upper hook holder
23	Pawl spring
24	Pawl pin bushing

Fig. No.	Description
25	Pawl
26	Pawl pin
27	Brake seat
28	Suspension ring pin
29	Friction plate
30	Ratchet disc race
31	Ratchet disc
32	Braking cover
33	Stay tube
34	Hand wheel
35	Hand chain
36	Hand wheel cover
37	Thick washer
38	Channel nut M8
39	Pin 2 x 16
40	Screw 3 x 16
41	Latch kit
42	Double spring
43	Upper hook kit
44	Lock nut M3
45	Lower hook pin
46	Lock nut M5
47	Lower hook kit

CHAIN

Inspect chain before each use. Between regular inspections, check visually daily for nicks, gouges, weld splatter, corrosion, or distorted links. Inspect chain thoroughly if it does not feed smoothly over load sheaves. Inspect as follows.

1. Clean chain before inspection.
2. Test hoist with load and observe operation of chain over load sheaves.
3. Slacken chain and inspect contact points for excessive wear. Refer to Figure 2.



Figure 2

C. DO NOT, WHERE APPLICABLE:

1. Lift more the rated load.
2. Operate the product when it is restricted from forming a straight line with the direction of loading.
3. Operate with twisted, kinked or damaged chain.
4. Operate if chain is not seated in sheaves or sprockets.
5. Wrap chain around load or use chain as a sling.
6. Operate unless load is properly applied to the saddle or bowl of the hook.
7. Operate if load is applied to the tip of the hook.
8. Operate with damaged or missing hook latches.
9. Lift people or lift loads over people.
10. Operate with side-pulling or side-loading of load to hoist.
11. Operate a damaged or malfunctioning product.
12. Operate with other than hand power.
13. Remove, deface, or obscure warning label or labels.
14. Leave load suspended if unattended, unless specific precautions have been instituted.
15. Lengthen load chain or repair damaged load chain by welding.
16. Use chain as a ground for welding.

INSPECTION AND MAINTENANCE

Prior to initial use, all new, modified and repaired products shall be inspected in accordance with Table 1. Thereafter, items to be inspected are indicated in Table 1 by F (Frequent) or P (Periodic).

Frequent Inspections - Visual inspection by the operator or other authorized person. This inspection includes listening for unusual sounds while the product is operated that may indicate deficiencies.

Periodic Inspections - Audible-visual inspection as for Frequent Inspections, with some disassembly to allow a more detailed inspection if external conditions indicate the need.

Exception: Brakes require more than audible-visual inspection. Check daily by operating the product with and without load, stopping at various positions to ensure safe operation.

TABLE 1 - INSPECTION CHART

In chart, F indicates Frequent Inspection, P indicates Periodic Inspection

LOCATION		CHECK FOR	F	P
Braking mechanism		Slipping under load	✓	
		Hard to release	✓	
Brake parts:	Brake Discs	Glazing		✓
		Oil contamination		✓
	Pawl: Ratchet	Excessive wear		✓
	Pawl: Spring	Corrosion: stretch		✓
Hook		Chemical damage	✓	
		Deformation	✓	
		Cracks (dye penetrant, magnetic particle, or other suitable detection method)		✓
Hook retaining members (Pins, Bolts, Nuts)		Not tight or secure		✓
Hook Latch		Damaged; does not close	✓	
Suspension Members (Sheaves, Hand-wheels, Chain attachments, Suspension bolts or pins)		Excessive wear		✓
		Cracks	✓	✓
Gears		Distortion		✓
		Broken or worn teeth		✓
		Cracks		✓
		Inadequate lubrication		✓
Load Block: Suspension housing		Distortion	✓	✓
		Cracks	✓	✓
Trolley: Supporting structure		Possible inability to continue supporting loads		✓
Bolts, Nuts, Rivets		Not tight or secure		✓
WARNING Label		Removed or illegible	✓	

HOOKS


WARNING

1. Any hook that requires replacement because of excessive bends, twists, or throat opening indicates abuse or overloading of the product. Therefore, other load-supporting components of the product should be inspected for possible damage when such conditions are found.
2. Never repair hooks by welding or reshaping. Heat applied to the hook will alter the original heat treatment of the hook material and reduce the strength of the hook.
3. Never weld handles or other attachments to the hook.

HOOK INSPECTION

Where applicable, inspect hooks and measure throat opening at least once a month. Between regular inspections check visually daily for deformation, distortion, twisting, damage and missing or damaged hook latches.

Hooks damaged from chemicals, deformations or cracks, or that have more than 10° twist from the plane of the unbent hook or excessive opening or seat wear, must be replaced. Also, hooks that are opened to the extent that the latch does not engage the tip must be replaced. See figure 1.

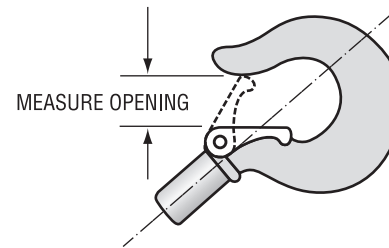

Replace hook when opening is greater than 16mm

Figure 1 - Hook throat opening